



Safety Strap Attachment

A. Locate a wall stud behind the piece of furniture. Position a bracket (A) on the stud approximately 1" below the top of the furniture. Mark and drill a hole into the center of the stud using a 3/32" drill bit. Attach a bracket to the stud with the long screws (B).

B. Move the furniture to its final position against the wall and mark the location of the wall bracket on the back of the furniture. The bracket that attaches to the furniture must go into the solid wood piece at the top, not into the thinner back panel. Move the furniture away from the wall and place a bracket (A) on the mark. Mark and drill holes for the screws using a 3/32" drill bit. Attach the bracket to the furniture using the short screws (C).

C. Move the furniture to its final position, and align the bracket on the furniture with the bracket on the wall. Thread the strap (D) through the bracket as shown, and tighten until snug. Do not overtighten.

Important: Check that the wall bracket is firmly screwed into the stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

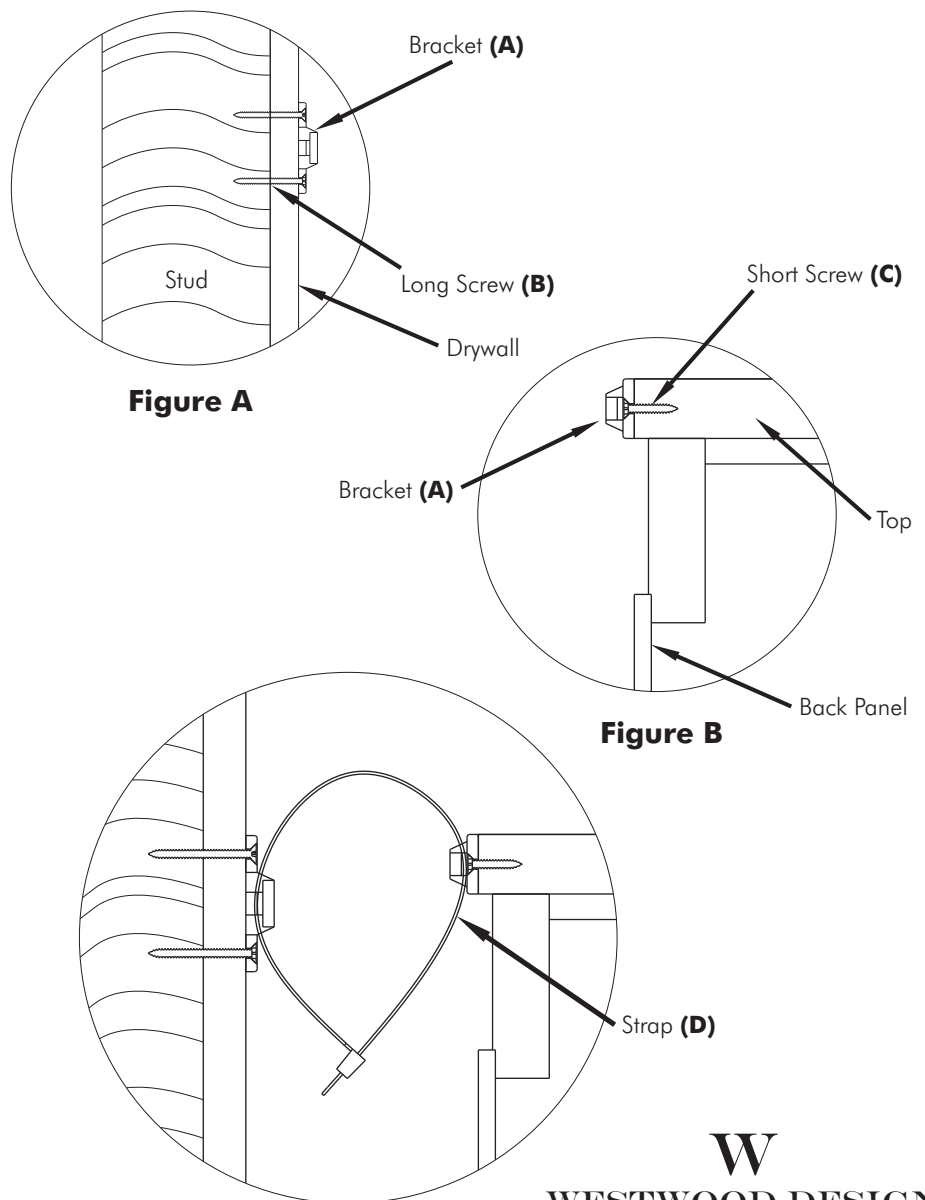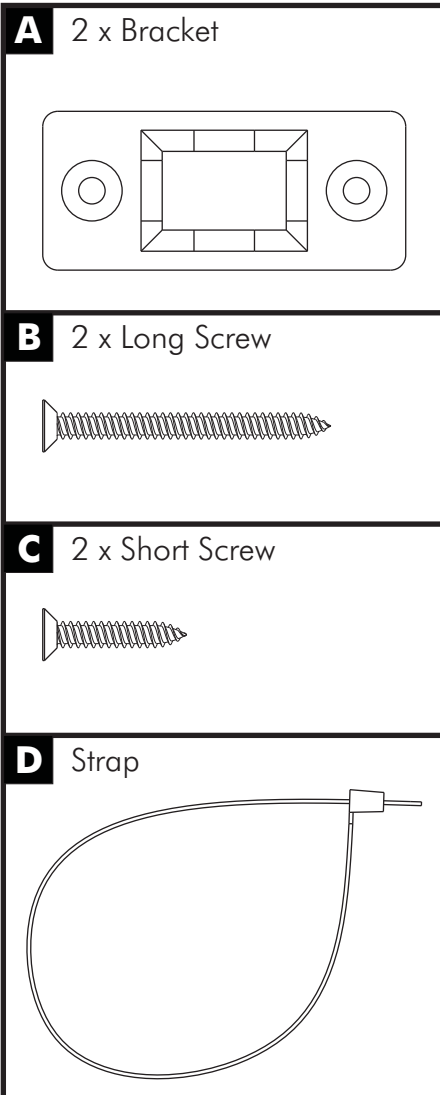

W
WESTWOOD DESIGN
635 N. Billy Mitchell Rd., Ste. B
Salt Lake City, UT 84116
Phone: 1-908-719-4707
support@westwoodbaby.com

Pour Attacher La Courroie de Sécurité

A. Trouvez un montant dans le mur derrière la meuble. Placez un support (A) sur le montant à environ 2 cm. (1") en dessous du haut du meuble. Marquez cet endroit et percez un trou dans le centre du montant à l'aide d'une perceuse avec embout de 3/32". Vissez le support au montant du mur avec les visses longues (B).

B. Placez le meuble en position finale contre le mur et marquez la position que devra prendre le support à l'arrière du meuble. Le support fixé sur le meuble doit être vissé dans du bois solide du dessus du meuble, pas sur le panneau mince à l'arrière. Éloignez le meuble du mur et vissez le support dans l'arrière du meuble à l'aide des visses courtes (C).

C. Placez le meuble en position finale, et alignez le support du meuble avec celui du mur. Enfitez la courroie de sécurité (D) à travers le support tel que montré, puis serrez jusqu'à ce que la courroie soit bien ajustée. Ne pas trop serrer.

Important: Vérifiez que le support du mur soit bien vissé dans un montant, que le support du meuble soit bien attaché au meuble, et que la courroie soit bien ajustée.

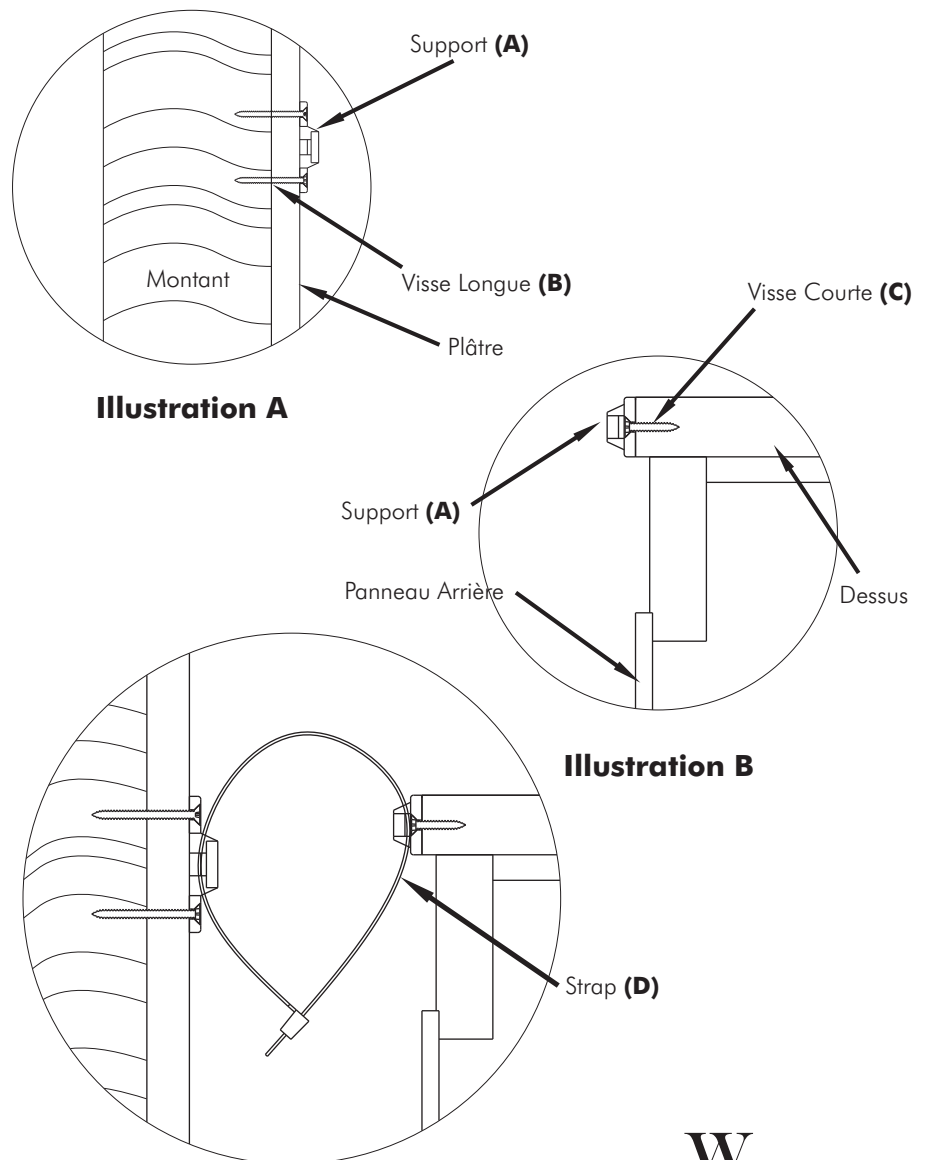
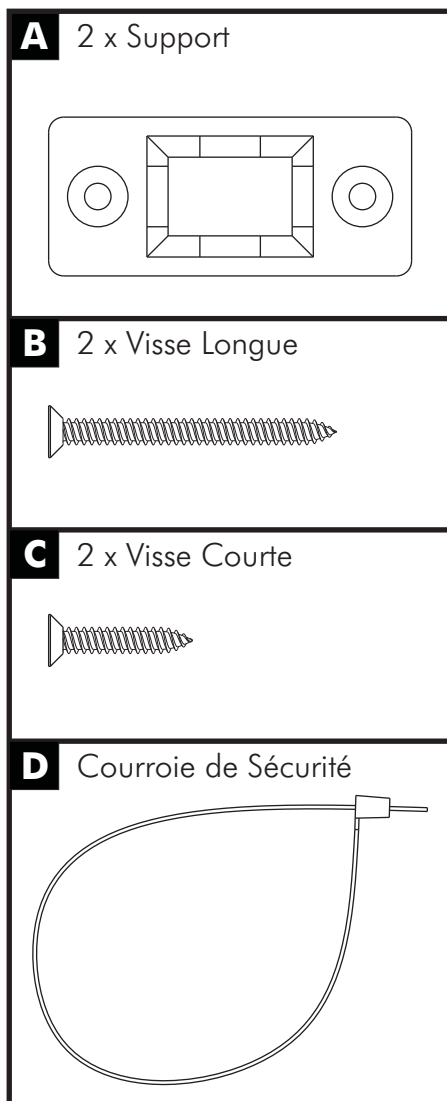


Figure C

W
WESTWOOD DESIGN
 635 N. Billy Mitchell Rd., Ste. B
 Salt Lake City, UT 84116
 Phone: 1-908-719-4707
 support@westwoodbaby.com