

Safety Strap Attachment


A. Locate a wall stud behind the piece of furniture. Position a bracket (A) on the stud approximately 1" below the top of the furniture. Mark and drill a hole into the center of the stud using a 3/32" drill bit. Attach a bracket to the stud with the long screws (B).

B. Move the furniture to its final position against the wall and mark the location of the wall bracket on the back of the furniture. The bracket that attaches to the furniture must go into the solid wood piece at the top, not into the thinner back panel. Move the furniture away from the wall and place a bracket (A) on the mark. Mark and drill holes for the screws using a 3/32" drill bit. Attach the bracket to the furniture using the short screws (C).


C. Move the furniture to its final position, and align the bracket on the furniture with the bracket on the wall. Thread the strap (D) through the bracket as shown, and tighten until snug. Do not overtighten.

Important: Check that the wall bracket is firmly screwed into the stud, the furniture bracket is firmly attached to the frame, and the strap is snug.


A 2 x Bracket

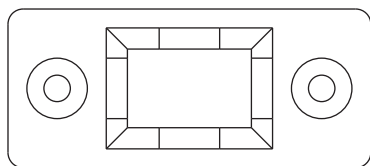

B 2 x Long Screw

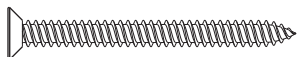

C 2 x Short Screw

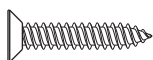

D Strap

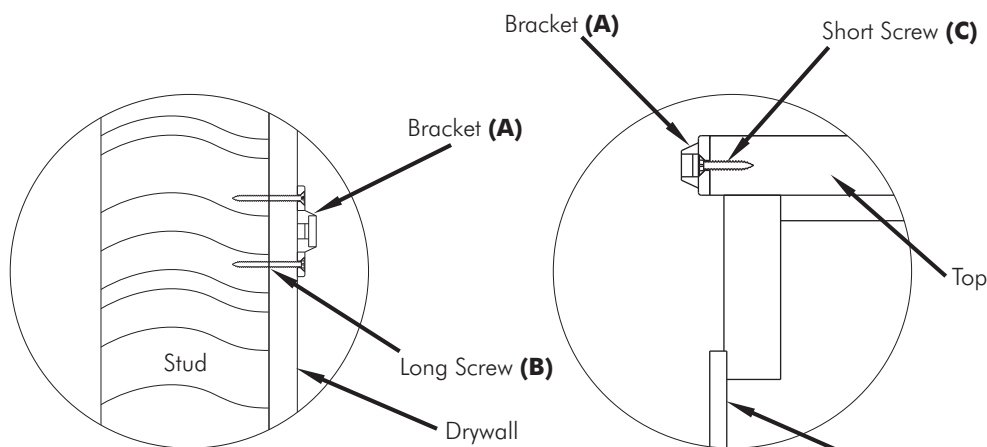
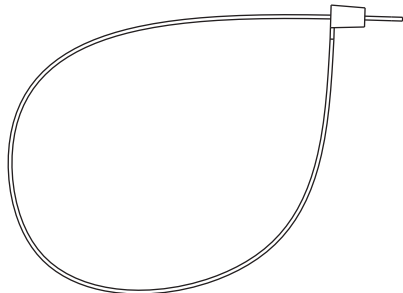


Figure A

Figure B

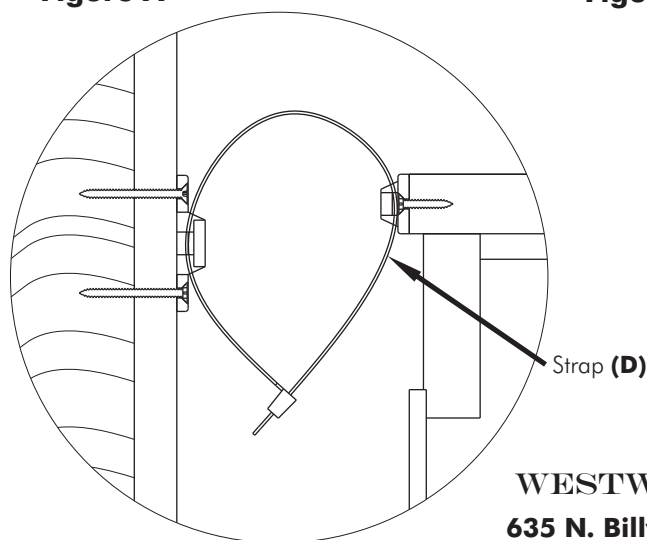


Figure C

W
WESTWOOD DESIGN
635 N. Billy Mitchell Rd., Ste. B
Salt Lake City, UT 84108
Phone: 1-908-719-4707
support@westwoodbaby.com