


# WESTWOOD DESIGN

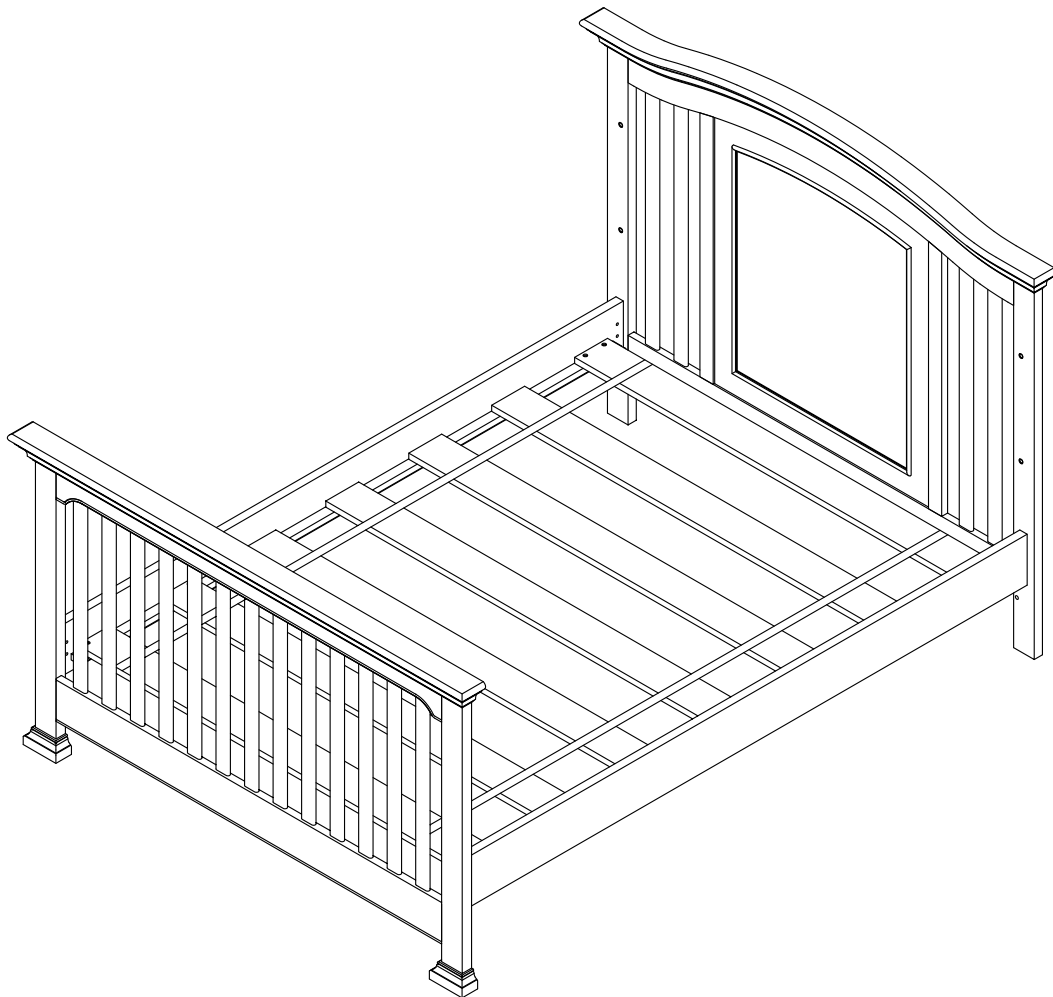

## **AVALON**


**Bed Rails / Barrière de lit**

**Assembly Instruction**


**Instructions d'assemblage**

# Parts & Hardware Included / Pièces et matériel inclus


Bed Rails / Barrière de lit (x 2)

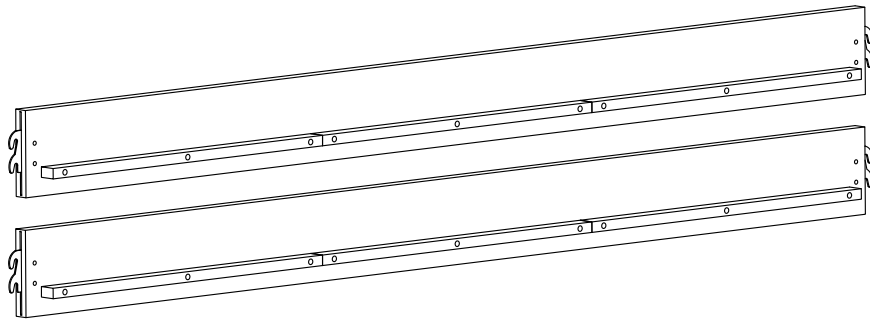


Slat Rolls / Lamelles

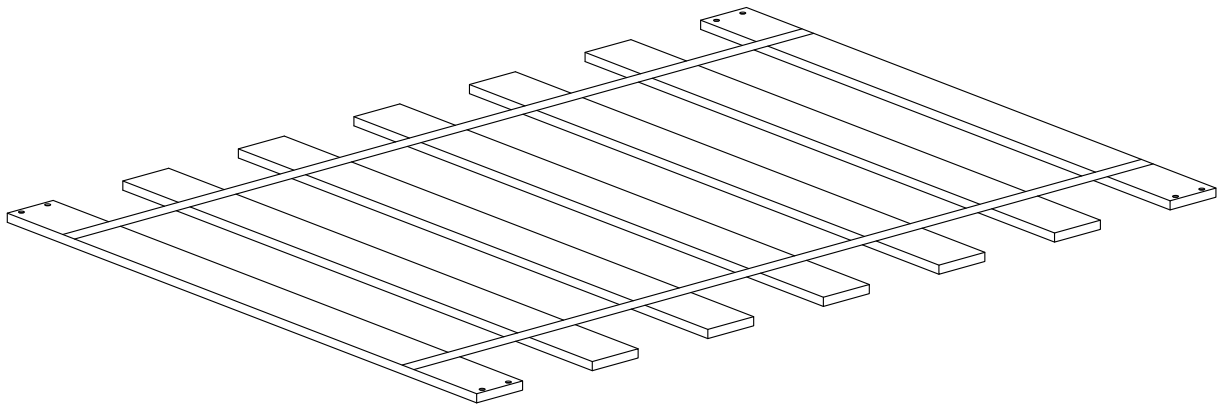


M6 x 5/8" Bolt / Boulon (x 4)



1-1/4" Wood Screw /  
Vis à bois (x 8)

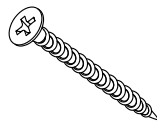


Allen Wrench / Clé Allen

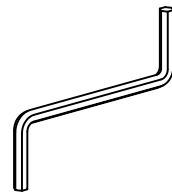

# Required Parts & Hardware / Pièces et matériel requis

Step 1 / Etape 1

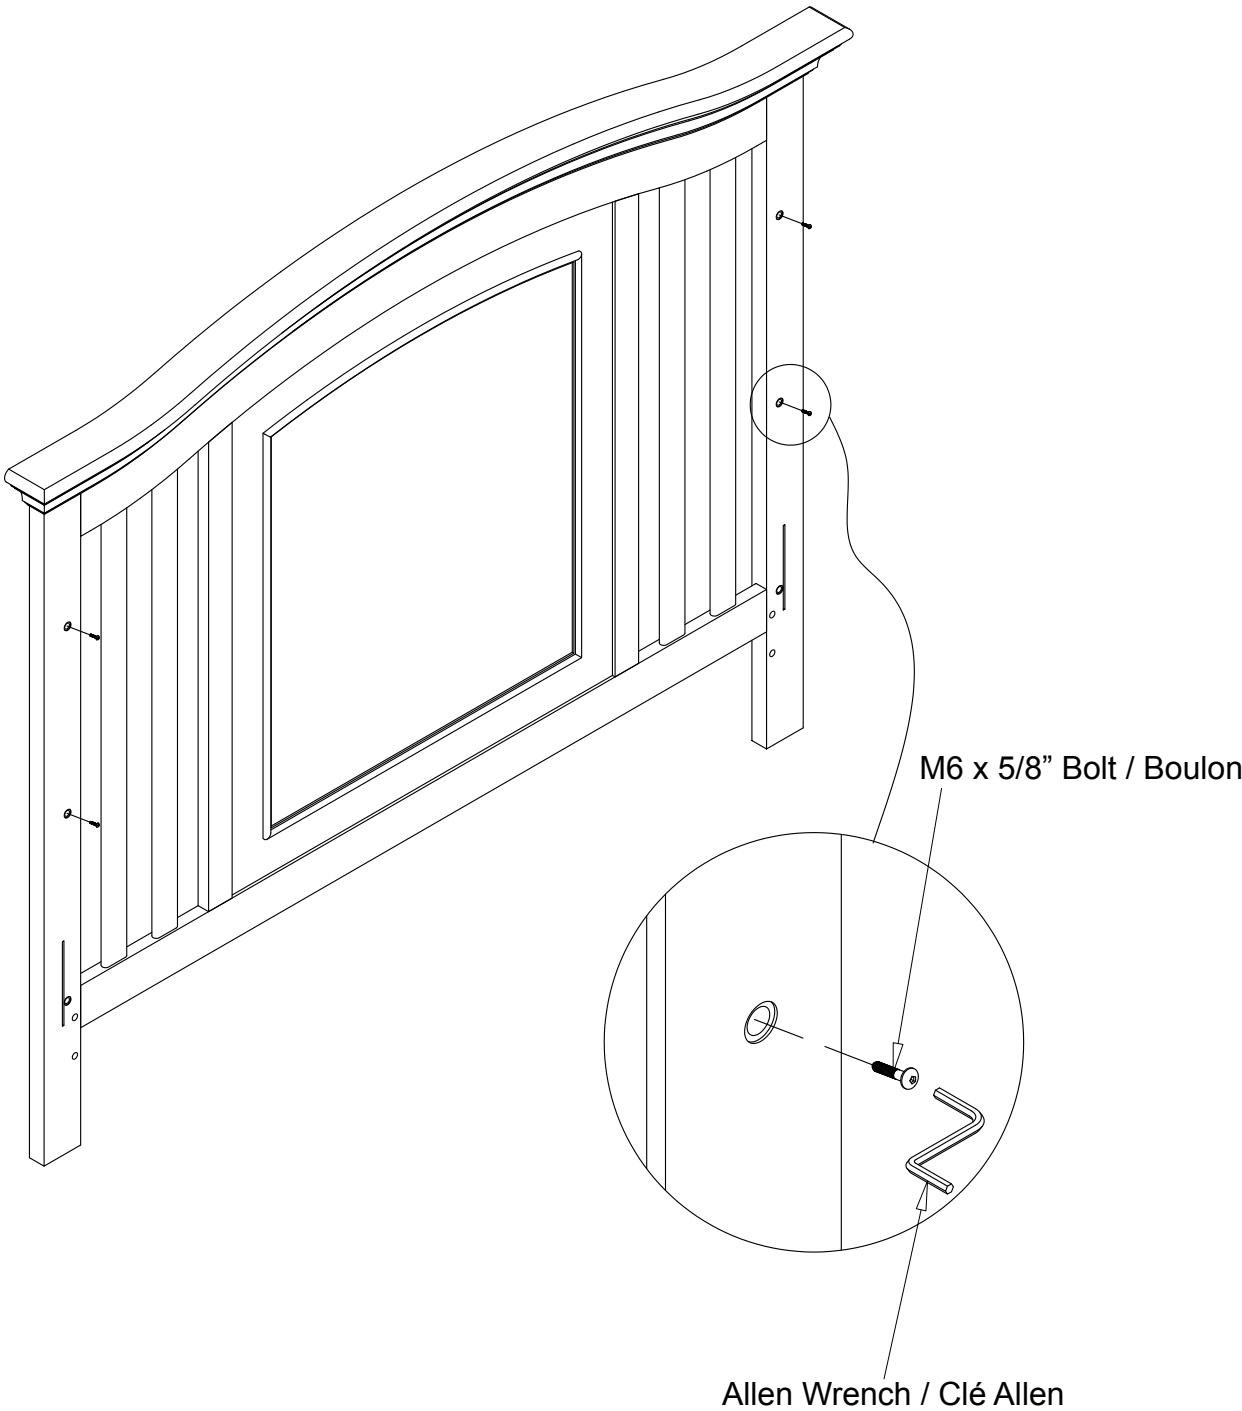


# Required Parts & Hardware / Pièces et matériel requis

## Step 2 / Etape 2

Insert the bed rail hooks into the headboard & footboard slot as shown below. Make sure both rails are secure and stable.

Insérez les crochets de rail de lit dans la tête de lit et pied de lit fente comme indiqué ci-dessous.

Assurez-vous que les deux rails sont sûrs et stables.

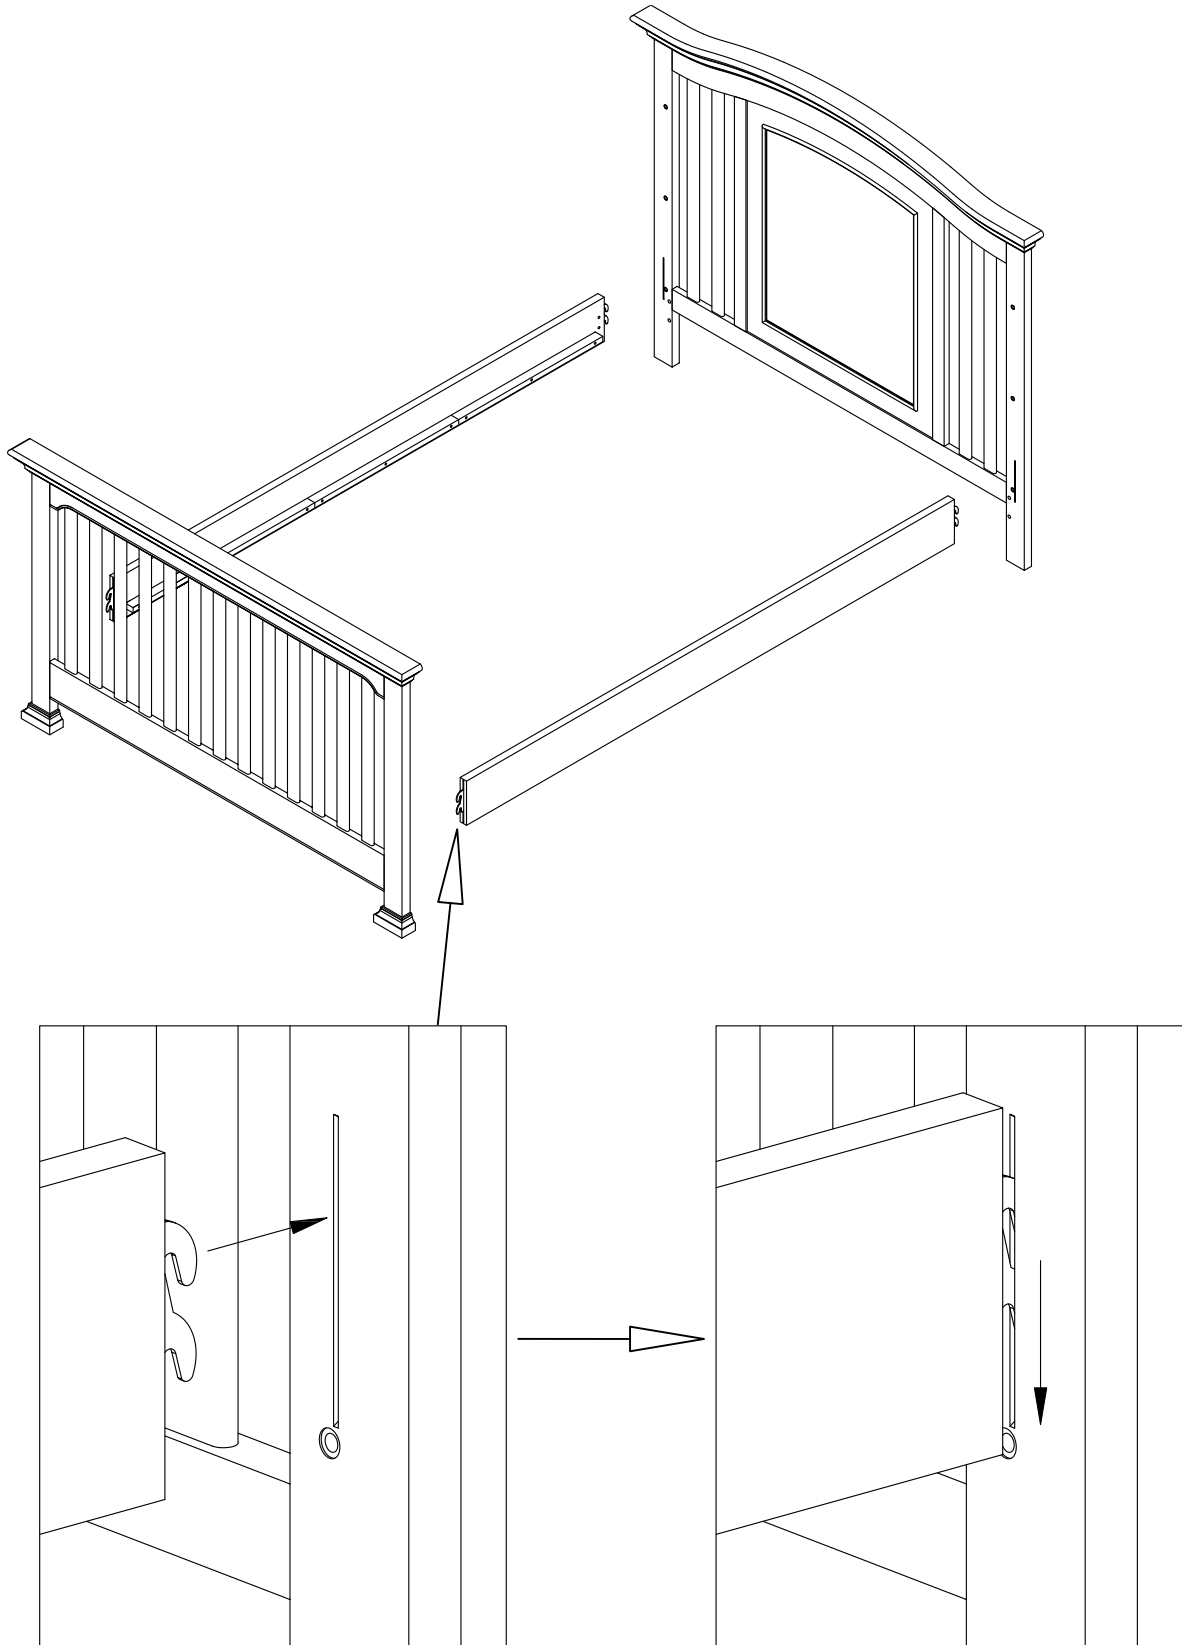

# Required Parts & Hardware / Pièces et matériel requis

## Step 3 / Etape 3

